

Hair dryer

Instructions manual

EN



SENCOR®

SHD 6504W / SHD 6505VT

Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g., when moving or when you need to send this product for repair).

EN-1

CONTENTS

IMPORTANT SAFETY NOTICE	3
DESCRIPTION	4
MAINTENANCE AND CLEANING.....	5
TECHNICAL FEATURES.....	5
DISPOSAL OF USED ELECTRICAL & ELECTRONIC EQUIPMENT	6
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	6

IMPORTANT SAFETY NOTICE

- This appliance must not be used by persons (including children) with mental disabilities, weak strength or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- Use extra care if the product is used near children. Always keep the product out of the reach of children. Children must be supervised to ensure that they do not play with the product.
- Extreme precaution should be exercised when using any type of domestic appliances, especially the followings:
 - Before you plug the appliance in, check if the voltage specified on the label of the appliance corresponds to the mains voltage in your home.
 - Do not use the appliance in the immediate surroundings of a bath, a shower or a swimming pool.
 - Do not place the appliance on windowsills.
 - Make sure that the electrical cable and plug cannot come in contact with water or humidity.
 - Do not spray the appliance with any liquid. Never immerse any part of the appliance in water or any other liquid.
- This appliance is for domestic use only and should not be used industrially. Do not use the appliance outdoors.
- Exercise extreme care whenever the appliance is to be used near the children.
- Disconnect the appliance from the power supply if it is to be moved, cleaned or if it is not used.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance if the electrical cable is damaged or whenever any possible internal failure or incorrect operation has been detected.
- Do not attempt to make any repairs yourself. Always contact the official repair services for either mechanical or electrical repairs.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Unplug the appliance by holding the plug; do not pull on the electrical cable.
- Do not use the appliance for other than intended use.
- Care should be taken not to block the inlet and outlet grill when the appliance is switched on. If either grill becomes blocked, the appliance will automatically cut out. After cooling for a few minutes, it will switch back on automatically.
- In case the appliance is usually used in the bathroom it is recommended to unplug it after each use since water presents danger although the appliance is switched off.
- For extra protection it is possible to fit the electrical household installation with a fault current breaker with rated breaking current of no more than 30 mA. Ask your electrician for advice.




Do not use this appliance near baths, showers, washbasins or other containers containing water.

Hair dryer

SHD 6504W / SHD 6505VT

DESCRIPTION

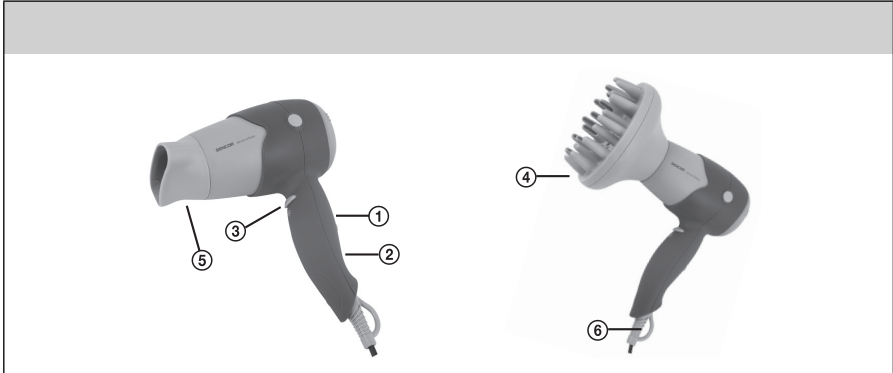

- ① Switch (0, 1, 2)
0 = off
1 = gentle drying
2 = fast drying
- ② Hand grip
- ③ Cool down button
- ④ Volume attachment
- ⑤ Air concentrator
- ⑥ Hanging loop

Using the attachments

- Choose an attachment: air concentrator or volume attachment and attach it to the hair dryer.

Air concentrator

- The air concentrator serves for fast hair drying.

Volume attachment

- Using the volume attachment, you can add volume and root lift to your hair.
- For long-lasting styling results we recommend you to apply a styling product (e.g. mousse).
- Place the volume attachment with the fingers against your head.
- Gently move the attachment back and forth over a small section until the hair moves up the fingers. Hold the attachment in place until the hair gets dry. Continue section by section.

Cold shot

- To fix a style, shortly activate the cold shot button.

Hair dryer

SHD 6504W / SHD 6505VT

EN

MAINTENANCE AND CLEANING

- For cleaning the outside parts of the appliance use a dry cloth only. Do not use any abrasive cleaning agents, solvents etc. to clean the appliance.

TECHNICAL FEATURES

230 - 240 V ~ 50 Hz, 1400 W

Noise level: 72 dB(A)

The declared noise emission level for this appliance is 72 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

Instruction for handling with used packaging/disposal of the product upon the end of operating life
Used packaging/product upon the end of operating life should be dumped on the place appointed for dumping of the waste, or into the junk.

Hair dryer

SHD 6504W / SHD 6505VT

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.