

# INSTRUCTION MANUAL

## HAIR WAVER FOX WAVER

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, please always follow the basic safety precautions as listed below

#### READ ALL INSTRUCTIONS BEFORE USING KEEP THE UNIT AWAY FROM WATER DANGER:

As for most electrical appliances, electrical parts are electrically live even if the unit is turned off.

For reducing fatal risk by electrocution:

1. Always unplug the appliance immediately after using.
2. Do not use while bathing or showering.
3. Do not place or store the appliance where it can fall or be pulled into a water tub or sink.
4. Do not place in or drop into water or other liquid.
5. If the appliance falls into water, unplug it immediately. Do not reach into water.

**WARNING:** To reduce the risk of burns, electrocution, fire or injury to any person:

1. User should not leave an appliance unattended when it is plugged in.
2. Extra care should be paid when appliance is used by, on, or near children or individuals with certain disabilities.
3. Do not use any attachments which are not provided by the manufacturer. Follow all instructions mentioned in this manual when using.
4. Never use the appliance when cord/plug is damaged. Also, if the appliance does not work properly or is dropped into water/fluid, do not use it and, and/ or return the appliance to a service center for examination and repair.
5. Keep the power cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Do not use outdoors and never use the appliance together with any aerosol (spray) products.
7. Never use this appliance while oxygen is administered.
8. Do not let eyes and bare skin touch the heated plates when using, Always use the handle.
9. Do not rest heated parts directly on any surface during use.
10. Never drop or insert any object into any opening on the appliance.
11. Attachments become hot during use. Let them cool before handling.
12. Never use while sleeping.
13. Do not use an extension cord with this appliance.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

### SAVE THESE INSTRUCTIONS

#### USER MAINTENANCE INSTRUCTIONS

- Your appliance is virtually maintenance free. No lubrication is required.
- Keep heated parts & surfaces clean and free from dust, dirt and chemicals (such as hair spray).
- If cleaning becomes necessary, remember to disconnect the appliance from the power supply and allow to cool. Then wipe the exterior with a damp (never wet) cloth.
- If the cord becomes twisted or tangled, untangle it before use.

**WARNING:** If any malfunction occurs, **DO NOT** attempt to repair it by yourself as there is no user-serviceable parts.

#### STORAGE:

- Before storing the appliance, let it cool down first.
- Appliance should be kept in a place which is safe, dry, and out of reach of children.
- Never wrap the cord around the appliance or the cord will wear and break prematurely. Avoid jerking, bending sharply, twisting or straining the cord or plug.

#### INSTRUCTION:

1. Ensure hair is dry and combed through.
2. Plug the waver into a current socket of a voltage specified on the rating plate.
3. Turn the temperature dial to preset the styling temperature.
4. Move the ON/OFF switch to the ON position, and the LED light on flashing.
5. When the waver heats up to the presented temperature, the LED turn to light on constantly.
6. Separate a 5 cm (Maximum) section of hair.
7. Place the section of hair between the heating plates, keep the waver pressed together for a few seconds, then let it go away from the plates. Repeat the operation on the same section of hair below or on another until the expected effect.
8. After use, move the ON/OFF switch to the OFF position and unplug the waver. Allow to cool before storing away.