

INSTRUCTIONS

for the use of the

FOX SWING hair clipper



Before using, please read the instructions carefully.

READ ALL INSTRUCTIONS BEFORE USING:

- As for most electrical appliances, electrical parts are electrically live even if the unit is turned off. For reducing fatal risk by electrocution:
1. Always unplug the appliance immediately after using.
 2. Do not use while bathing or showering.
 3. Do not place or store the appliance where it can fall or be pulled into a water tub or sink.
 4. Do not place in or drop into water or other liquid.
 5. If the appliance falls into water, unplug it immediately. Do not reach into water.

NOTES BEFORE USING

Before using the clipper for the first time, charge the batteries for 90 minutes. With 4 attached combs: 3, 6, 9, 12(mm). Only one copy of this book instruction, please pay attention to keep it carefully in order to use whenever.

WARNING


- To reduce the risk of burns, electrocution, fire or injury to any person:
1. User should not leave an appliance unattended when it is plugged in.
 2. This appliance is not suitable for use people (including children) with physical, sensory or mental disabilities or who do not have the relevant experience or knowledge of using such appliance, unless under the supervision of or after having received instruction in the use of the appliance by an individual who is responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
 3. Do not use any attachments which are not provided by the manufacturer. Follow all instructions mentioned in this manual when using.

Never use the appliance when cord/plug is damaged. Also, if the appliance does not work properly or is dropped into water/fluid, do not use it, and/or return the appliance to a service center for examination and repair.

5. Keep the power cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Do not use outdoors and never use the appliance together with any aerosol (spray) products.
7. Never use this appliance while oxygen is administered.
8. Do not let eyes and bare skin touch the heated plates when using, always use the handle.
9. Do not rest heated parts directly on any surface during use.
10. Never drop or insert any object into any opening on the appliance.
11. Attachments become hot during use. Let them cool before handling.
12. Never use in bed or while sleeping.
13. Do not use an extension cord with this appliance.
14. Do not touch this appliance when your hands or feet are wet.
15. This appliance must only be used for the purposes for which it is expressly intended. Any other use is to be considered improper and therefore dangerous. The manufacturer accepts no responsibility for damage by improper or erroneous use.

PARTS IDENTIFICATION

1. ON/OFF Switch
2. LED display
3. Blade
4. Comb attachments
5. Mains power supply (adapter)

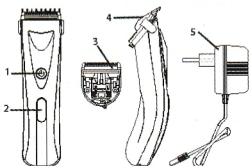

HOW TO USE

1. Put the adaptor connected with the jack of the battery pack which lies at the bottom of the machine, then put the adaptor pins connected with the Power. The clipper may be used for both plugged in and/or wireless operation. The time needed for fully charging the batteries is 1.5 h. The clipper can be charged also from a standing charger connected to the lower part of this device. After the batteries are fully charged, the clipper may be used continuously for over 45 minutes. The value displayed in the window indicates the present charge level status. For example, 40 means 40% of battery charge. LOW stands for insufficient battery charge, and the need to charge it. 100% means that the battery is fully charged.
2. Press the switch button slightly before using. If not enough battery, please charge with adaptor for using.

3. This model with blade adjustment function, can adjust the position of cutter bit. (See picture).



HOW TO INSTALL AND UNINSTALL THE BLADE

1. To install, please aim the blade at slot for install, then press the full parts until hearing the "KA" sound. See picture (in the direction indicated by the arrow)



2. To uninstall, holding the hair clipper in obverse, then pull the blade slightly out of the body for uninstall. See picture (in the direction indicated by the arrow)



HOW TO USE THE COMB ATTACHMENT

1. Please aim the comb feet at column nails of body sides and make 90° angle with the blade underside, then assemble it. See picture (in the direction indicated by the arrow)



1. 2. Pull the comb feet out of the body for uninstall, please. See picture (in the direction indicated by the arrow)



MAINTENANCE OF THE BLADES

1. Push the blade out of the machine, then use the cleaning brush to wipe off the scraps among the blade. Lubricating the space between the stationary and the moving blades with 2 or 3 drops of oil .
2. Clean the blade after using every time in time.

WHEN CHARGING

Please don't charge if the temperature is lower than 0°C or higher than 40°C. Please don't charge if it is nearby the sunlight perpendicular incidence or the heat source radiates. The standard charging time is 90 minutes In order to avoid mangling the batteries, please don't extend the charging time.

CAUTIONS

Cleaning the housing using only a cloth slightly depended water or a mild soap solution. Never use a caustic solution.

TECHNIC DATA

Voltage for the motor: 2.4 V DC
 Rated power: 10 W
 Rated voltage: 2.4 V
 Charging time: 1.5 hrs.

Please Note: Be sure to charge one time at least within one year after the shipment



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Disposal in non-EU countries

At the end of its service life, please dispose of the appliance in accordance with statutory requirements.

SAVE THESE INSTRUCTIONS

STORAGE:

- Before storing the appliance, let it cool down first.
- Appliance should be kept in a place which is safe, dry, and out of reach of children.
- Never wrap the cord around the appliance or the cord will wear and break prematurely. Avoid jerking, bending sharply, twisting or straining the cord or plug.

IMPORTANT

As additional safety measure, it is recommended that a tested residual current appliance (RCD) with a residual operating current of not more than 30mA be installed in the bathroom circuit. Ask your electrician for advice

WARNING:

Do not use this appliance near showers, baths, swimming pools and other water tanks.

WARNING:

If any malfunction occurs, **DO NOT** attempt to repair it by yourself as there is no user-serviceable parts.

