

IMPORTANT MANUAL HAIR BRUSH FOX RED HOT

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, please always follow the basic safety precautions as listed below

READ ALL INSTRUCTIONS BEFORE USING KEEP THE UNIT AWAY FROM WATER DANGER:

As for most electrical appliances, electrical parts are electrically live even if the unit is turned off.

For reducing fatal risk by electrocution:

1. Always unplug the appliance immediately after using.
2. Do not use while bathing or showering.
3. Do not place or store the appliance where it can fall or be pulled into a water tub or sink.
4. Do not place in or drop into water or other liquid.
5. If the appliance falls into water, unplug it immediately. Do not reach into water.

WARNING: To reduce the risk of burns, electrocution, fire or injury to any person:

1. User should not leave an appliance unattended when it is plugged in.
2. This appliance is not suitable for use people (including children) with physical, sensory or mental disabilities or who do not have the relevant experience or knowledge of using such appliance, unless under the supervision of or after having received instruction in the use of the appliance by an individual who is responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
3. Do not use any attachments which are not provided by the manufacturer. Follow all instructions mentioned in this manual when using.
4. Never use the appliance when cord/plug is damaged. Also, if the appliance does not work properly or is dropped into water/fluid, do not use it and, and/or return the appliance to a service center for examination and repair.
5. Keep the power cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Do not use outdoors and never use the appliance together with any aerosol (spray) products.
7. Never use this appliance while oxygen is administered.
8. Do not let eyes and bare skin touch the heated plates when using. Always use the handle.
9. Do not rest heated parts directly on any surface during use.
10. Never drop or insert any object into any opening on the appliance.
11. Attachments become hot during use. Let them cool before handling.
12. Never use in bed or while sleeping.
13. Do not use an extension cord with this appliance.
14. Do not touch this appliance when your hands or feet are wet.
15. Do not use this appliance on wigs that have synthetic hair.
16. This appliance must only be used for the purposes for which it is expressly intended. Any other use is to be considered improper and therefore dangerous. The manufacturer accepts no responsibility for damage by improper or erroneous use.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Disposal in non-EU countries

At the end of its service life, please dispose of the appliance in accordance with statutory requirements.

SAVE THESE INSTRUCTIONS

USER MAINTENANCE INSTRUCTIONS

- Your appliance is virtually maintenance free. No lubrication is required.
- Keep heated parts & surfaces clean and free from dust, dirt and chemicals (such as hair spray).
- If cleaning becomes necessary, remember to disconnect the appliance from the power supply and allow to cool. Then wipe the exterior with a damp (never wet) cloth.
- If the cord becomes twisted or tangled, untangle it before use.

WARNING: If any malfunction occurs, **DO NOT** attempt to repair it by yourself as there is no user-serviceable parts.

STORAGE:

- Before storing the appliance, let it cool down first.
- Appliance should be kept in a place which is safe, dry, and out of reach of children.
- Never wrap the cord around the appliance or the cord will wear and break prematurely. Avoid jerking, bending sharply, twisting or straining the cord or plug.

INSTRUCTION:

1. Make sure that the hair is dry.
2. Plug the brush into the electrical socket; make sure the mains voltage corresponds to the voltage indicated on the brush rating plate.
3. To turn the brush on, press the ON/OFF push button. Two LEDs on the display will light up: one at the temperature of 1500 C and the other one at POWER.
4. To increase the temperature, press the ON/OFF push button.
5. When the POWER red diode is lit, this indicates that the brush has reached the required temperature. Now you can begin styling your hair.
6. The wide range of temperature means that the brush is ideal for styling of all kinds of hair.
7. The infrared function and ionisation start automatically after the brush is turned on.
8. Never touch the scalp with the hot brush.
9. After you have finished using your brush, turn it off by pressing the ON/OFF push button so that all LEDs go out, and then remove the plug from the socket.
10. Allow the brush to cool down.
11. Always hold the brush by its handle.

IMPORTANT

As additional safety measure, it is recommended that a tested residual current appliance (RCD) with a residual operating current of not more than 30mA be installed in the bathroom circuit. Ask your electrician for advice

WARNING:

Do not use this appliance near showers, baths, swimming pools and other water tanks.

