



Operating instructions

IMPORTANT SAFEGUARDS
When using an electrical appliance, basic precautions should always be followed, including the points listed below. Read all instructions and safeguards before using the appliance.

WARNING
To reduce the risk of injury or death by electric shock:
1. Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it in or drop into water or other liquid.
4. Always unplug this appliance before the electrical outlet immediately after using.
5. Always unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:
• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
Warning: Keep the Product Dry. It is essential to PREVENT electrical equipment from coming into contact with water or other liquids.
• Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
• If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
• Keep the cord away from heated surfaces.
• Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
• Do not use the appliance with a damaged or broken cord nor with fraying missing from the blades, as injury may occur.

SAVE THESE INSTRUCTIONS

This tool is not designed for household use.

- | | |
|--|-----------------|
| A - Bottom blade | D - Switch |
| B- Blade slide (on Multi-cut (MC) clipper only) | E- Top blade |
| C - Taper lever (on Multi-cut (MC) clipper only) | F - Power screw |

CLIPPER MAINTENANCE

Your Wahl clipper blades were oiled and aligned before leaving our factory; however, it is possible for blades to get bumped out of alignment. Blades must be realigned if they have been removed for cleaning or replacement. To determine if realignment is necessary, compare your clipper blades with diagram G.

- If your clipper has a taper lever, position the taper lever in the close cut position. (H)
- End of top blade teeth should be approximately 1/32" (64 mm) back from bottom blade. This is important so that the clipper does not cut too close or allow the moving cutter to touch the skin.
- Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.

4. Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade.
If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "On" for a few moments, turn "Off" and unplug. Loosen screws slightly and adjust (steps 2-4 listed above). Tighten screws after blades are aligned. Other than blades this clipper has no user serviceable parts. (diagram I)

OIL (J)
The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent, as the solvent will evaporate and leave the thick oil, slowing down the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not stick down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)

Your clipper has a power screw, please use it when adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it.
To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power out (counterclockwise), just until noise stops. Turn to the maximum power setting. (K)

CORD

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and the unit placed in original box or storage pouch (if provided).

If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug which will only fit one way. If the plug does not fit in one way, do not force it. In the event the plug does not fit fully in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

TAPER LEVER (Not found on all models of Wahl Clippers)

If your clipper has an adjustable taper lever, it is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted for your desired taper. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. (diagram H) Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb. (diagram K)

The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the blades without the need to turn the clipper. To remove hair, turn the clipper on and turn the lever to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of hair. If your clipper stops cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING

Before you cut your hair

- 2 yr old kit includes a plastic cape, comb and in around the neck, bring the strings and overlapping the cape portion to prevent hair from falling down inside the collar. If no cape is provided, a towel will do.
- Position the person whose hair is to be cut on a stool or chair so that the top of his head is about even with your eyes.
- After combing the hair to remove all tangles, hold the clipper in a relaxed, comfortable grip, with the rimpalette (the comb) facing the hair. This grip will help you maintain control, accurately trim and cut.

NOTE: To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the clipper blade. (L)

Depending on the kit you purchased your kit may include one of the following:

Adjustable Guide Combs - allowing multiple cutting lengths in the convenience of a single comb.
Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb.
Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using adjustable guide combs:

The small adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M)
The large adjustable guide comb has five settings from 3/4" to 1-1/4" (19mm to 32mm) in 1/8" (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have positive click stops and indicators that show position number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape to the ear area. (O2)

Using individual (black or colored) guide combs:

Some kits do not include all Wahl guide combs. However, any of these combs (or additional accessories not listed here) may be available from your dealer or can be ordered directly from Wahl.

INDIVIDUAL COLOR CODE KEY:

- | | |
|--------------------------------|-------------------------------|
| • 3mm - Black/Red | • 6mm - Black/Purple |
| • 10mm - Black/Dark Blue | • 13mm - Black/Orange/Pink |
| • 16mm - Black/Yellow | • 19mm - Black/Lavender |
| • 22mm - Black/Green | • 25mm - Black/Light Blue |
| • 31mm - Black/White | • 38mm - Black/White |
| • Right Ear Taper - Black only | • Left Ear Taper - Black only |

CUTTING HAIR

FOR MEDIUM TO LONG CUTS: (P)

The first time you cut your hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Cutting over the comb, or grasping the comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.

2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.

If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.
This entire procedure requires practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you will give a fairly short cut if you use the 1" guide comb. If you desire the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

FOR LONGER HAIR ON TOP:

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the back of the head. The adjustable guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.

2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.
If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.
This entire procedure requires practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you will give a fairly short cut if you use the 1" guide comb. If you desire the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

FOR LONGER HAIR ON TOP:

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the back of the head. The adjustable guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.
2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.
If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.
This entire procedure requires practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you will give a fairly short cut if you use the 1" guide comb. If you desire the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the back of the head. The adjustable guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.
2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.
If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.
This entire procedure requires practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you will give a fairly short cut if you use the 1" guide comb. If you desire the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the back of the head. The adjustable guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.
2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.
If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.
This entire procedure requires practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you will give a fairly short cut if you use the 1" guide comb. If you desire the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the back of the head. The adjustable guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.
2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.
If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.
This entire procedure requires practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you will give a fairly short cut if you use the 1" guide comb. If you desire the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the back of the head. The adjustable guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.
2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.
If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.
This entire procedure requires practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you will give a fairly short cut if you use the 1" guide comb. If you desire the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the back of the head. The adjustable guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.


Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

1 Start by combing the hair so it falls into its natural direction.
2 Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.
If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.
This entire procedure requires practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you will give a fairly short cut if you use the 1" guide comb. If you desire the 1-1/4" or 1-1/2" guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the back of the head. The adjustable guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept, roomy look.
For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

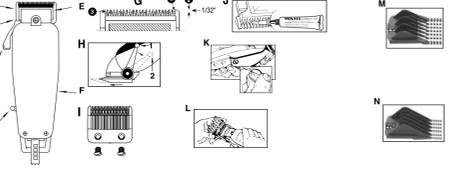

Gebrauchsanweisung

WICHTIGE SICHERHEITSHINWEISE

Beim Gebrauch eines Elektrogerätes sollten immer grundlegende Vorsichtsmaßnahmen beachtet werden, insbesondere die folgenden aufgeführten. Lesen Sie vor Gebrauch alle Anweisungen und Sicherheitshinweise sorgfältig durch.
GEFÄHR
Vermeiden Sie das Risiko einer Verletzung oder des Todes durch einen elektrischen Schlag.
1. Greifen Sie nicht nach innen ins Wasser gefüllten Gerät. Ziehen Sie den Stecker aus der Steckdose.
2. Verwenden Sie das Gerät nicht in der Badewanne oder unter der Dusche.
3. Platzieren Sie das Gerät bei Verwendung in der Nähe von Wasser (z. B. in Waschbecken oder eine Wanne füllt) oder gezeugen werden könnte. Tauchen Sie das Gerät nicht in Wasser oder andere Flüssigkeiten und lassen Sie sich nicht dort hängen fallen.
4. Ziehen Sie außer wenn Sie das Gerät aufladen, nach jedem Gebrauch den Stecker des Gerätes aus der Steckdose.
5. Ziehen Sie vor dem Reinigen des Gerätes immer den Stecker aus der Steckdose.

WARNING

To Reduce the Risk of Injury or Death by Electrical Shock:
• Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
• Do not use while bathing or in a shower.
• Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it in or drop into water or other liquid.
• Always unplug this appliance before the electrical outlet immediately after using.
• Always unplug this appliance before cleaning.
WARNING
To reduce the risk of burns, fire, electric shock or injury to persons:
• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
Warning: Keep the Product Dry. It is essential to PREVENT electrical equipment from coming into contact with water or other liquids.
• Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
• If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
• Keep the cord away from heated surfaces.
• Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
• Do not use the appliance with a damaged or broken cord nor with fraying missing from the blades, as injury may occur.

SAVE THESE INSTRUCTIONS

- | | |
|--|-----------------|
| A - Bottom blade | D - Switch |
| B- Blade slide (on Multi-cut (MC) clipper only) | E- Top blade |
| C - Taper lever (on Multi-cut (MC) clipper only) | F - Power screw |

CLIPPER MAINTENANCE

Your Wahl clipper blades were oiled and aligned before leaving our factory; however, it is possible for blades to get bumped out of alignment. Blades must be realigned if they have been removed for cleaning or replacement. To determine if realignment is necessary, compare your clipper blades with diagram G.

- If your clipper has a taper lever, position the taper lever in the close cut position. (H)
- End of top blade teeth should be approximately 1/32" (64 mm) back from bottom blade. This is important so that the clipper does not cut too close or allow the moving cutter to touch the skin.
- Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.

4. Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade.
If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "On" for a few moments, turn "Off" and unplug. Loosen screws slightly and adjust (steps 2-4 listed above). Tighten screws after blades are aligned. Other than blades this clipper has no user serviceable parts. (diagram I)

OIL (J)
The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent, as the solvent will evaporate and leave the thick oil, slowing down the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not stick down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)

Your clipper has a power screw, please use it when adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it.
To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power out (counterclockwise), just until noise stops. Turn to the maximum power setting. (K)

CORD

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and the unit placed in original box or storage pouch (if provided).

If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug which will only fit one way. If the plug does not fit in one way, do not force it. In the event the plug does not fit fully in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

TAPER LEVER (Not found on all models of Wahl Clippers)

If your clipper has an adjustable taper lever, it is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted for your desired taper. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. (diagram H) Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb. (diagram K)

The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the blades without the need to turn the clipper. To remove hair, turn the clipper on and turn the lever to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of hair. If your clipper stops cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING

Before you cut your hair

- 2 yr old kit includes a plastic cape, comb and in around the neck, bring the strings and overlapping the cape portion to prevent hair from falling down inside the collar. If no cape is provided, a towel will do.
- Position the person whose hair is to be cut on a stool or chair so that the top of his head is about even with your eyes.
- After combing the hair to remove all tangles, hold the clipper in a relaxed, comfortable grip, with the rimpalette (the comb) facing the hair. This grip will help you maintain control, accurately trim and cut.

NOTE: To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the clipper blade. (L)

Depending on the kit you purchased your kit may include one of the following:

Adjustable Guide Combs - allowing multiple cutting lengths in the convenience of a single comb.
Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb.
Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using adjustable guide combs:

The small adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M)
The large adjustable guide comb has five settings from 3/4" to 1-1/4" (19mm to 32mm) in 1/8" (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have positive click stops and indicators that show position number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)
The small adjustable guide comb can be used from the nape to the ear area. (O2)

Using individual (black or colored) guide combs:

Some kits do not include all Wahl guide combs. However, any of these combs (or additional accessories not listed here) may be available from your dealer or can be ordered directly from Wahl.

INDIVIDUAL COLOR CODE KEY:

- | | |
|--------------------------------|-------------------------------|
| • 3mm - Black/Red | • 6mm - Black/Purple |
| • 10mm - Black/Dark Blue | • 13mm - Black/Orange/Pink |
| • 16mm - Black/Yellow | • 19mm - Black/Lavender |
| • 22mm - Black/Green | • 25mm - Black/Light Blue |
| • 31mm - Black/White | • 38mm - Black/White |
| • Right Ear Taper - Black only | • Left Ear Taper - Black only |

CUTTING HAIR

FOR MEDIUM TO LONG CUTS: (P)

