

STYLE STARTS WITH WHAT'S INSIDE.

NEURO® CURL XL IS CRAFTED FROM INDUSTRIAL-GRADE COMPONENTS UNDER RIGOROUS QUALITY CONTROL. **CREATIVE VISION, POWERED BY CUTTING-EDGE TECHNOLOGY: THAT'S INTELLIGENT STYLING.**

INTELLIGENT STYLING TIPS

HOW TO CREATE A FAUX BLOWOUT LOOK:

- 1 Determine if you would want your blowout shaped toward the face or away from the face.
- 2 Divide the hair into 3 subsections using your ear as a guide:
 - a. Bottom – Mid ear to mid ear
 - b. Middle – In front of the ear to in front of the ear
 - c. Top – Remaining hair
- 3 Lightly spray the bottom section with Neuro™ Protect HeatCTRL® Iron Hairspray and split into two sections. Using your Neuro® Curl XL curl the hair under. Clip to allow to cool.
- 4 Continue in this pattern using 1-3" subsections. Clip and allow to cool.
- 5 While hair is clipped lightly spray the hair with Neuro™ Finish HeatCTRL® Style Spray to set the look.
- 6 Unclip the sections and shake the hair to release and loosen the curls to create the appearance of a blowout.



ANATOMY OF INTELLIGENT STYLING

- Heats up to 450° F in seconds
- Premium IsoTherm titanium Curling Iron
- SmartSense microchip for lightning-fast heat recovery
- Customizable auto shut-off
- 9-foot swivel cord with hanging loop
- Dual voltage for worldwide use

OPERATING INSTRUCTIONS



Mode Button



On / Off Button



+ Button



- Button

PRESS AND HOLD THE ON/OFF BUTTON FOR 2-4 SECONDS TO LOCK/UNLOCK THE MODE (M) OR THE + AND - BUTTONS

USE + AND - BUTTONS TO SELECT:

- 390° F for fine hair
- 410° F for medium hair
- 430° F for coarse hair
- 450° F for professional use

PRESS MODE BUTTON 1X TO SET AUTO SHUT-OFF TIME (0-90 minutes)

PRESS MODE BUTTON 2X TO RETURN TO MAIN SCREEN

UPGRADE TO
2YR
Warranty

REGISTER YOUR TOOL AT
WWW.NEUROHAIR.COM/REGISTER
Please call 1-888-522-8622 or email us at support@neurohair.com before returning any Neuro® appliance.

Guaranteed **ONLY** when purchased within the professional beauty salon industry, **NOT** from a drugstore, supermarket, or other unauthorized source.

PROLONGER LA GARANTIE À 2 ANS.

ENREGISTREZ VOTRE OUTIL SUR
WWW.NEUROHAIR.COM/REGISTER

Veuillez appeler le 1-888-522-8622 ou nous envoyer un e-mail à support@neurohair.com avant de retourner tout appareil Neuro®.

La garantie couvre **UNIQUEMENT** les produits achetés auprès d'un salon de coiffure professionnel et **NON PAS** les produits achetés dans une pharmacie, un supermarché ou toute autre source non autorisée.

MEJORA A GARANTÍA DE 2 AÑOS.

REGISTRE SU PRODUCTO EN
WWW.NEUROHAIR.COM/REGISTER

Llame al 1-888-522-8622 o envíenos un mensaje de correo electrónico a support@neurohair.com antes de devolver cualquier aparato Neuro®.

Garantizado **SÓLO** cuando se adquiere dentro del sector de salones de belleza profesionales y **NO** en un supermercado u otro punto de venta no autorizado.

Distributed by
JOHN PAUL MITCHELL SYSTEMS
(USA) P.O. Box 10597, Beverly Hills, CA 90213-3597
Made in China.
neurohair.com

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING.

DANGER – Any appliance is electrically live, even when the switch is off. When not in use, always unplug the iron to prevent the risk of fire.

WARNING – To reduce the risk of burns, electrocution, fire or injury to persons and/or personal property:

- Use the iron only for the purpose described in this guide to prevent accidents, damage or malfunction.
- This appliance should never be left unattended when plugged in.
- Avoid multiple cables to a plug or use of an extension cord to prevent starting a fire from overheating.
- **KEEP AWAY FROM WATER** to prevent fire, electric shock, damage or malfunction.
- **KEEP AWAY FROM CHILDREN.**
- Do not handle the iron or cord with wet hands, as this may cause electric shock.
- Do not leave the iron in a position where it can fall or be pulled into a tub or sink.
- Keep the cord away from heated surfaces.
- **DO NOT WRAP THE CORD AROUND THE IRON.**
- Never place or insert objects on iron barrel, due to the risk of causing fire, accidents or malfunction.
- Do not operate where oxygen is being administered to avoid the risk of fire.
- **DO NOT USE WHEN CORD HAS BEEN DAMAGED OR IF PLUG IS LOOSE.**
- **DO NOT REPAIR, TAMPER WITH, OR TRY TO RECONSTRUCT** the iron, otherwise electric shock, malfunction or accidents may result.
- When inserting or pulling out the plug, hold the plug firmly to prevent the cord from peeling and to prevent accidents or malfunction.
- Stop using immediately if you smell an offensive odor. If ignored, it could cause a fire or other accidents.
- Do not keep the iron in a damp place, such as a bathroom, or it may malfunction.
- Stop using the iron and remove from the power source when there is an earthquake or thunder.
- Unplug the iron from the power source when cleaning or wiping to prevent fire or electric shock.

MAINTENANCE

Daily Maintenance: For the safe use of the iron, check the following daily:

- Check the cord and surface of the cord. Never use if any parts are cracked, split, torn or damaged.
- Check the plug and never use if it is cracked, split or damaged.
- Check the plug pins and never use if transformed or damaged.
- Check the controller and do not use if cracked, split, broken or damaged.
- When not in use, clean and dry the entire iron and store in a cool, dry place.

When ready to use, follow the directions for daily maintenance.

Daily Cleaning: To keep barrel clean, unplug the iron from the power source, and once the iron is cool, wipe down barrel after each use with a hot, damp towel.

WARNING: Do not wipe the iron with thinner, benzene, gasoline, lamp oil, and other solvents or chemicals, as that may cause accidents or malfunction, and may damage the iron and void the warranty.

Defects and Malfunction:

- Read all contents of the warranty completely and carefully before contacting the salon, the distributor or our Paul Mitchell® Pro Tools™ Warranty Center.
- John Paul Mitchell Systems® is not responsible for damage caused by misuse or due to operator accidents, such as dropping the appliance on the floor.

OPERATING INSTRUCTIONS

The iron has reached your selected temperature when the display screen reaches the desired temperature. Once you have finished styling, turn off and unplug the iron. This iron has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit securely, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

WARRANTY GUIDE

IMPORTANT: Warranty valid only when appliance is purchased from an authorized John Paul Mitchell Systems® salon or distributor. Terms and conditions may vary depending on salon/authorized retailer's individual exchange or return policy.

WITH PROOF OF PURCHASE AND WITHIN 12 MONTHS OR 24 MONTHS IF TOOL IS REGISTERED

Exchange of defective appliance is at John Paul Mitchell Systems' discretion. If your Neuro® appliance fails to operate properly within the first 12 months of purchase, or within 24 months of purchase when registered, consumers can return the appliance to the salon where it was purchased (terms and conditions may vary depending on salon/authorized retailer's individual exchange or return policy) and stylists can return it to their distributor, making sure to bring the original proof of purchase. Otherwise, you may send us your appliance, postage paid, along with completed Warranty Request, your proof of purchase, and a money order or credit card information for \$14.00 (USD) payable to Paul Mitchell® Pro Tools™ Warranty Center to cover shipping, handling and insurance back to you. Repair or servicing of defective appliances is not offered. Warranty replacement of Limited Edition appliances is subject to availability; appliances may be replaced with a similar or equal product.

ANY IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE 12-MONTH DURATION OF THIS WRITTEN LIMITED WARRANTY.

IN NO EVENT SHALL JOHN PAUL MITCHELL SYSTEMS® BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state both in the USA and Canada.

If tool is registered, 12 months is automatically extended to 24 months.


THIS WARRANTY DOES NOT COVER

Normal wear and tear, which includes, but is not limited to, housing or barrel scratches, and shorts or cuts in the power supply cord or plug. Damage due to misuse and abuse such as: Dropping, wrong voltage supply, neglecting safety precautions. Tampering, such as repair or attempted repair by unauthorized party. Neglect or lack of proper maintenance. Damage to cord: Do not wrap the cord around the iron as it can result in the cord breaking.

PLEASE BE ADVISED THAT IMPROPER USE OR MAINTENANCE OF YOUR APPLIANCE CAN RESULT IN DAMAGE TO PROPERTY OR PERSONAL INJURY, INCLUDING GREAT BODILY HARM. IT IS IMPORTANT TO FOLLOW THE INSTRUCTIONS. FAILURE TO DO SO CAN VOID THIS WARRANTY.

GENERAL SPECIFICATIONS

Model: NC17NAS
Rated Voltage: 110-240VAC
Frequency (Hz): 50/60Hz
Rated Wattage: 93W
Length of A.C. Cord: 9 ft. / 2.7 m
Weight (less cord): 430 g / 15.2 oz. / .95 lbs

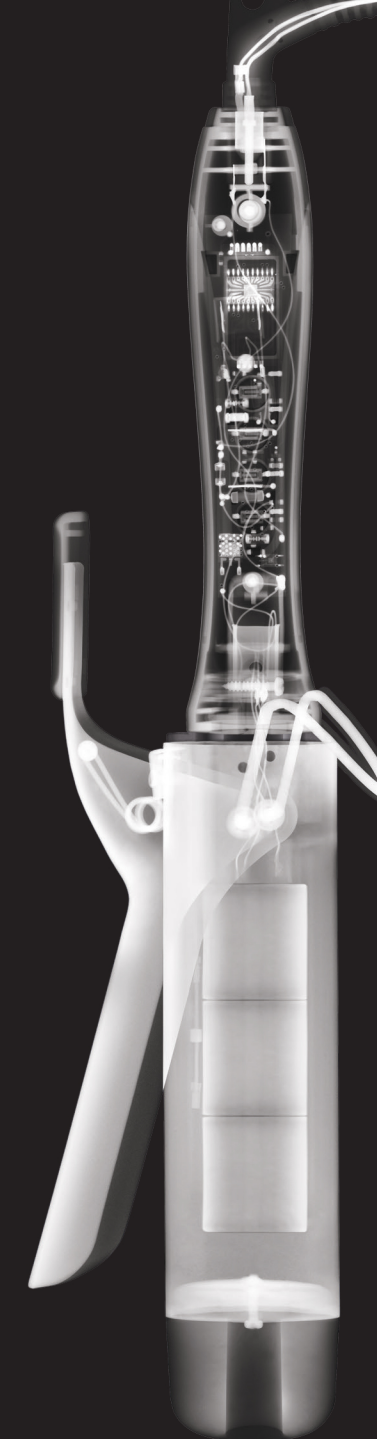

NEURO® CURL XL
INTELLIGENT STYLING

GUIDE D'UTILISATION • GUÍA DEL USUARIO